

TP-LINK®

User Guide

TL-WN321G 54M Wireless USB Adapter



2.4GHz 802.11b/g

Rev: 1.0.1

COPYRIGHT & TRADEMARKS

Specifications are subject to change without notice. **TP-LINK**° is a registered trademark of TP-LINK TECHNOLOGIES CO., LTD. Other brands and product names are trademarks or registered trademarks of their respective holders.

No part of the specifications may be reproduced in any form or by any means or used to make any derivative such as translation, transformation, or adaptation without permission from TP-LINK TECHNOLOGIES CO., LTD. Copyright © 2007 TP-LINK TECHNOLOGIES CO., LTD.

All rights reserved.

http://www.tp-link.com

FCC STATEMENT



This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference.
- 2) This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC RF Radiation Exposure Statement

This device has been tested for compliance with FCC RF Exposure (SAR) limits in the typical laptop computer configuration and this device can be used in desktop or laptop computers with side mounted PCMCIA slots. This device cannot be used with handheld PDAs (personal digital assistants). This device and its antenna must not be co-located or operated in conjunction with any other antenna or transmitter.

CE Mark Warning

CE1588®

This is a class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

National Restrictions

2400.0-2483.5 MHz

Country	Restriction	Reason/remark
Dulgorio		General authorization required for outdoor use and
Bulgaria		public service
France	Outdoor use limited to 10	Military Radiolocation use. Refarming of the 2.4 GHz
	mW e.i.r.p. within the band	band has been ongoing in recent years to allow current
	2454-2483.5 MHz	relaxed regulation. Full implementation planned 2012
Italy		If used outside of own premises, general authorization is
		required
Luxembourg	None	General authorization required for network and service
		supply(not for spectrum)
Norway	Implemented	This subsection does not apply for the geographical area
		within a radius of 20 km from the centre of Ny-Ålesund
Russian Federation		Only for indoor applications

TP-LINK®

DECLARATION OF CONFORMITY

For the following equipment:

Product Description: 54M Wireless USB Adapter

Model No.: TL-WN321G

Trademark: TP-LINK

We declare under our own responsibility that the above products satisfy all the technical regulations applicable to the product within the scope of Council Directives:

Directives 1999/5/EC

The above product is in conformity with the following standards or other normative documents

ETSI EN 300 328 V1.4.1: 2003 ETSI EN 301 489-17 V1.2.1: 2002

EN 61000-3-2:2000

EN 61000-3-3:1995+A1:2001

EN60950-1:2001 EN50392:2004

Recommendation 1999/519/EC

Person is responsible for marking this declaration:

TECHNOLOGIES CO.,LTD.

Zhao Jian Jun

Director of International Business

Date of Issue: 24-3-2007

TP-LINK TECHNOLOGIES CO., LTD.

ADD: Building 7, Second Part, Honghualing Industrial Zone,

Xili town, Nanshan District, Shenzhen, China

Website: www.tp-link.com



Package contents

The following contents should be found in your box:

- > One TL-WN321G 54M Wireless USB Adapter
- > One USB extension cable
- > One TL-WN321G 54M Wireless USB Adapter Resource CD, including:
 - Drivers and Utility
 - User Guide
 - Other Helpful Information



If any of the listed contents are damaged or missing, please contact the retailer from whom you purchased the product for assistance.

CONTENTS

Chapter	1 Introduction	1
1.1 F	Product Overview	1
1.2 N	Aain Features	1
1.3 L	.ED Status	1
Chapter	2 Installation Guide	2
2.1	Software Installation	2
2.1.	1 Overview	2
2.1.2	2 Installation for Windows 2000	2
2.1.3	3 Installation for Windows Vista	5
2.2 L	Jninstall Software	9
2.2.	Uninstall the driver software from your PC	9
2.2.2	2 Uninstall the utility software from your PC	10
Chapter	3 Configuration	11
3.1	Configuration of Utility	11
3.1.	1 Profile	11
3.1.2	2 Add or Edit a Configuration Profile	12
3.1.3	3 Link Status	14
3.1.4	Site Survey	15
3.1.5	5 Statistics	16
3.1.6	S Advanced	17
3.1.7	7 About	18
3.1.8	An example for application	19
3.2	Configuration for windows Vista	19
Appendi	ix A: Glossary	22
Appendi	x B: Specifications	24

Chapter 2 Installation Guide

Hardware Installation 2.1

- 1. Connect one end of the USB cable to the Adapter.
- 2. Connect the other end of the USB cable to the USB port on your computer. Because the Adapter gets its power from the host, there is no external power supply. The LED should light up when the Adapter is plugged in and the PC is on.

2.2 Software Installation

2.2.1 Overview

The Adapter's Setup Wizard will guide you through the installation procedure for Windows 98SE, Me, 2000, XP and Vista. The Setup Wizard will guide you install the Utility and drivers.

Before you install the software, please plug the adapter into your PC. After that, you will be prompted "Found New Hardware Wizard", click the Cancel button, and run the Setup Wizard program on the CD-ROM.

The Setup steps for Windows 98SE, Me, 2000, XP and Vista are very similar. The following setup steps are for windows 2000 and Vista.

2.2.2 Installation for Windows 2000

- 1. Insert the Resource CD into your CD-ROM drive, click the **Start** button and choose **Run**. In the field that appears, enter F:\XXX\Win98_Me_2K_XP_X64\Setup.exe (if "F" is the letter of your CD-ROM drive; XXX presents the setup program path, which is labeled on the Resource CD), Figure 2-1should then appear.
- 2. You can click the **Cancel** button to end the installation on the Preparing Setup screen, Figure 2-1. Otherwise, the Setup Wizard will display a screen similar to that shown in Figure 2-2 after a moment.

Chapter 1 Introduction

1.1 **Product Overview**

The TL-WN321G 54M Wireless USB Adapter is a USB 2.0 pen-size wireless adapter supporting IEEE 802.11b/g 2.4GHz radio operation. It provides high-speed wireless connection with data rate up to 54Mbps. Additionally, wireless roaming allows the user to move among different AP without losing the current connection. The adapter provides excellent security features including: TKIP, AES, WPA, and up to 128 bit WEP encryption security make the network almost impenetrable.

Featuring high performance transmission rates, simple installation and adaptability, as well as strong security the TL-WN321G 54M Wireless USB Adapter is the perfect solution for small office and home needs.

1.2 **Main Features**

- Complies with IEEE802.11g, IEEE802.11b standards
- Supports WPA data security, IEEE802.1x authentication, TKIP/AES encryption, 64/128-bit WEP encryption
- Supports 54/48/36/24/18/12/9/6Mbps or 11/5.5/2/1Mbps wireless LAN data transfer rates
- Provides USB interface
- Supports Ad-Hoc and Infrastructure modes
- Supports roaming between access points when configured in Infrastructure mode
- Eases configuration and provides monitoring information
- Supports Windows 98SE, Me, 2000, XP, Vista
- Internal Antenna

1.3 LED Status

The LED on the top of this card indicates Link/Act status. It blinks at green light when sending and receiving data.

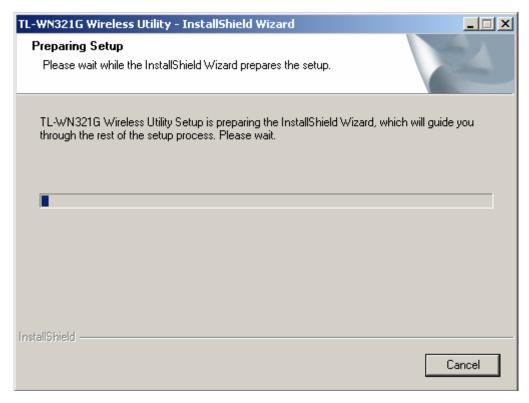


Figure 2-1 Preparing Setup

To continue, click the **Next** button on the screen, Figure 2-2. Click the **Cancel** button to end the Installation.

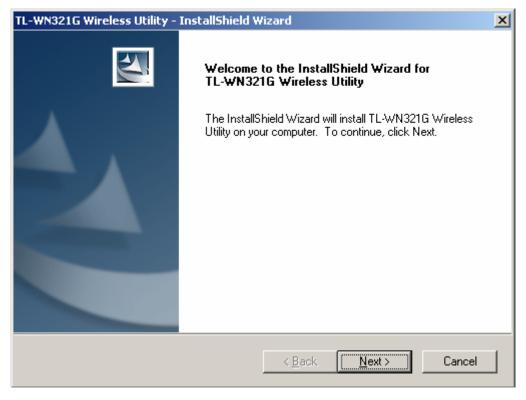


Figure 2-2 Start Setup

4. Click **Browse** to change the destination location for the software in Figure 2-3. Click **Next** to continue the Installation. Click Back to return to the previous page, or click Cancel to end the Installation.



Figure 2-3 Choose Destination Location

While files are copying, you will see a warning box shown in Figure 2-4. Please select YES to continue installation. Our drivers have been tested thoroughly, and are able to work with the operating system.

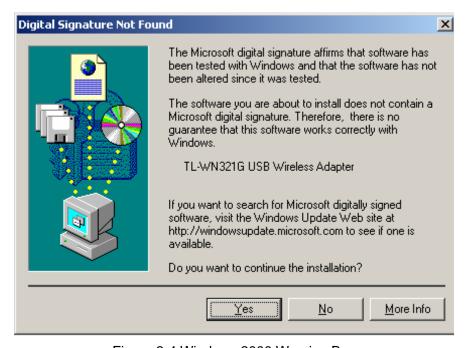


Figure 2-4 Windows 2000 Warning Box

6. After the files have been successfully copied, the screen in Figure 2-5 will appear. Click the Finish button to finish the wizard.

Figure 2-5 Finish

< Back

Finish

After installing the driver successfully, you should see an icon, appear in your system tray.

2.2.3 Installation for Windows Vista

After you complete the hardware installation, follow the steps below in order to install the TL-WN321G Wireless USB Adapter drivers for Windows Vista:

1. Insert the Resource CD into your CD-ROM drive, right-click the **Computer** icon as shown in the Figure 2-6, select the **Properties**.



Figure 2-6 Begin installation for Windows Vista

2. Select Device Manager as shown in Figure 2-7, then select Continue in the next screen.



Figure 2-7 Select Device management

3. Right-click the adapter icon "54M.USB...", and select "Update Driver Software" to proceed.

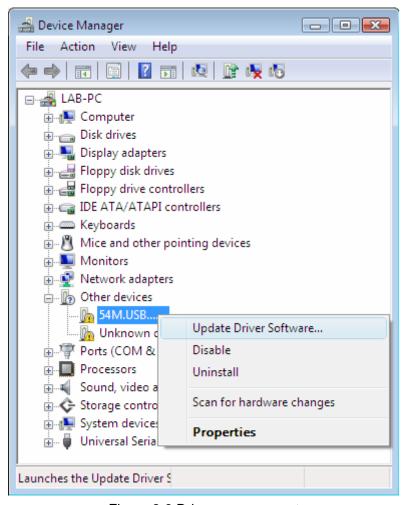


Figure 2-8 Driver management

4. Select the method to update the driver software (see Figure 2-9). If you want the system to search the software automatically, select the first type. Otherwise select "Browse my computer for driver software" to install the software (best way).

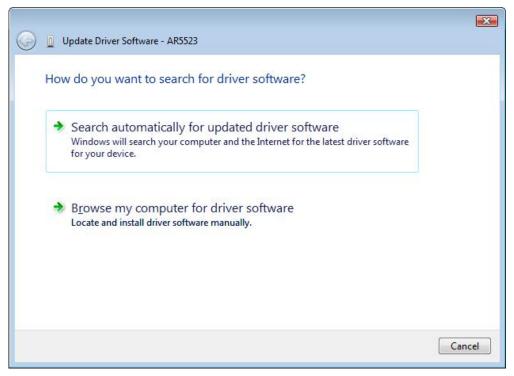


Figure 2-9 Select the method to install

Click the **Browse** button in the next screen to select the file which contains the driver software for the adapter. After that, click **Next** to proceed.

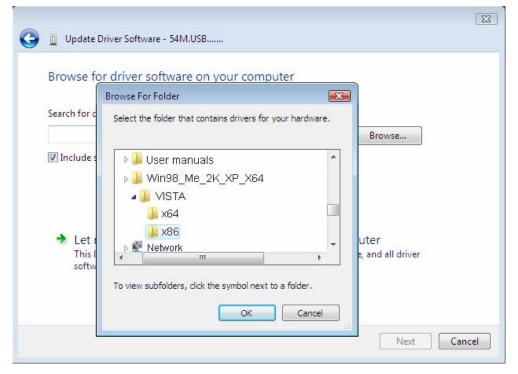


Figure 2-10 Select the driver software

Note:

Vista X86 is designed for the Vista of 32bit, Vista X64 is designed for the Vista of 64bit, please select according as you need.

6. After that, the installation will proceed as shown in Figure 2-13.

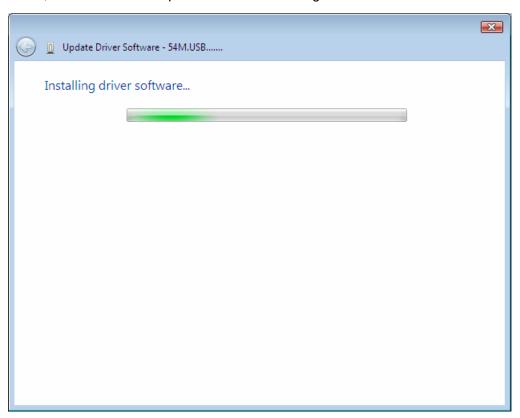


Figure 2-11 Installing

Note:

During the installation, you will see the warning box as shown in figure 2-12, please select "Install this driver software anyway" to proceed.



Figure 2-12 warning for security

7. Finally, the installation will complete, you will see the next screen below, click Close to complete.

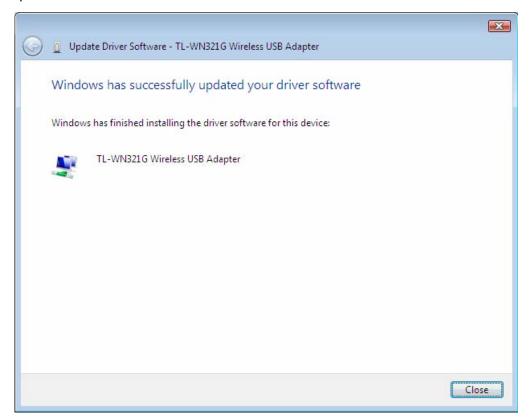


Figure 2-13 Complete the installation

Uninstall Software 2.3

2.3.1 Uninstall the driver software from your PC

- 1. On the Windows taskbar, click the Start button, point to Settings, and then click Control Panel.
- 2. Double-click the **System** icon, click on the **Hardware** tab in the **System** window.
- 3. Click on the **Device Manager** button, double-click **Network Adapters**, and then right-click TL-WN321G Wireless USB Adapter.

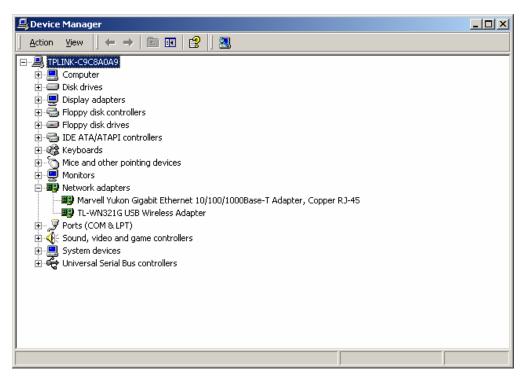


Figure 2-14 Uninstall Driver

Click Uninstall..., shown in above Figure 2-14, the system will uninstall the driver software of the adapter from your PC.

2.3.2 Uninstall the utility software from your PC

- On the Windows taskbar, click the Start button, point to Settings, and then click Control
- 2. Double-click the Add/Remove Programs icon, find the TL-WN321G program from the installed program list, highlight it and click the Remove button.
- Following the Install Shield Wizard will uninstall the utility software from your PC. 3.

Note:

TL-WN321G don't have utility for windows Vista, so you should follow the section 2.3.1 to uninstall the driver software from your PC.

Chapter 3 Configuration

3.1 Configuration of Utility

TP-LINK TL-WN321G Wireless USB Adapter can be configured by its utility for Windows 98SE, ME, 2000, XP. This section describes how to configure your Wireless USB Adapter for wireless connectivity on your Wireless Local Area Network (WLAN) and use the data security encryption features.

After the Adapter's driver and utility has been installed, the adapter's tray icon, 11 or 11, will appear in your system tray. It means the utility is running on your system. If the utility does not run, you can run the utility by clicking: Start> Program> TP-LINK> TL-WN321G WIRELESS UTILITY> TL-WN321G Wireless Utility. If the icon still does not appear, the driver or utility may be installed incorrectly or the adapter is unplugged, please try again.

Icon III means the connection has been established. Icon III means there is no connection.

Double-click the icon and the configuration screen of the utility will appear. You can also run the utility by clicking: Start> Program> TP-LINK> TL-WN321G WIRELESS UTILITY> TL-WN321G Wireless Utility. The utility provides a complete and easy to use set of tools to:

- Display current status information
- Edit and add configured profiles
- Display current diagnostics information

The section below introduces these above capabilities.

Note:

If your OS is Windows XP, you can use Windows XP to configure the wireless network settings. (To use this function, you must upgrade the OS with sp1).

If you want to use Windows XP to configure wireless network settings, just exit the utility.

Right-click the icon at the bottom of the screen, and click **Exit** to exit the utility.

3.1.1 Profile

Click the Profile tab of the utility and the Profile screen will appear, Figure 3-1. The Profile screen provides tools to:

- Add a Profile
- Delete a profile
- Edit a profile
- Activate a profile

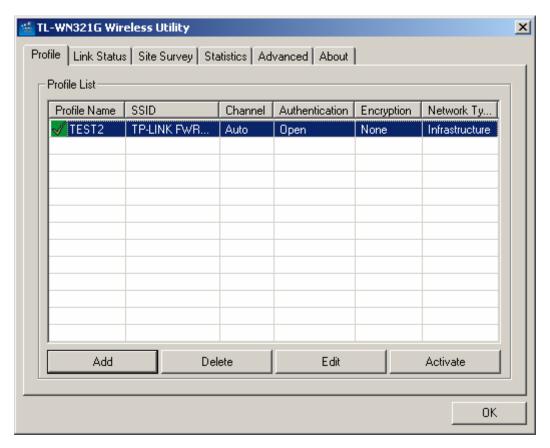


Figure 3-1 Profile Tab

To create a new profile, click the **Add** button on the Profile tab, the **Profile** configuration screen will appear as shown in Figure 3-2.

To edit a profile, highlight the desired profile name on **Profile Name** list, and click the **Edit** button, the **Profile** configuration screen will appear shown in Figure 3-1.

To delete a profile, highlight the desired profile name on **Profile Name** list, and click the **Delete** button.

To switch to another profile, highlight the desired profile name on Profile Name list, and click the Activate button.

Note:

Do not forget to click the **Apply** button when you create a new profile for connection.

3.1.2 Add or Edit a Configuration Profile

To add a new configuration profile, click **Add** button on the Profile Management tab. To modify a configuration profile, select the configuration from the Profile list and click **Edit**.

The Profile Management dialog box will display a screen similar to that shown in Figure 3-2.

1. Edit the Configuration tab

- Profile Name Identifies the configuration profile. This name must be unique. Profile names are not case-sensitive.
- > **SSID** The IEEE 802.11 wireless network name. This field has a maximum limit of 32 characters.
- PSM(Power Save Mode)
 - CAM(Constantly Awake Mode) Continuous Access Mode.
 - PSM(Power Saving Mode) Power Saving mode.
- > Network Type Displays the wireless mode, either Ad-hoc or Infrastructure mode
- ➤ **Preamble** Specifies the preamble setting in 802.11b. The default setting is Auto Switch (access point mode), which allows both short and long headers in the 802.11b frames. The adapter can only use short radio headers if the access point supports and uses them.
- > RTS Threshold Default is 2312.
- Fragment Threshold Default is 2312.
- Ad-hoc mode Displays the wireless mode, either Only 802.11B or 802.11B/G mode.
- ➤ Channel Shows the current channel in use. This field determines which operating frequency will be used.

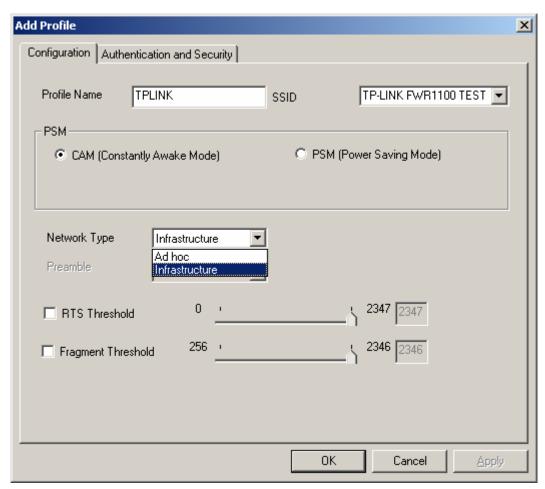


Figure 3-2 Add Profile - configuration

2. Edit the Authentication and Security tab

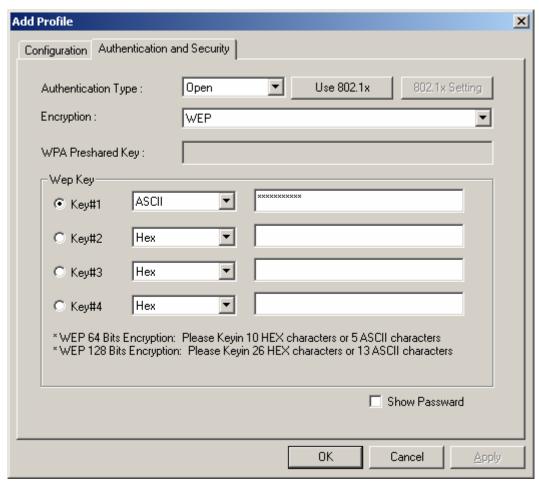


Figure 3-3 Add Profile – configuration

- > Authentication Type Three options, Open System, Shared-Key System or LEAP.
- > **802.1x Setting** It enables when Authentication Type is setting to WPA.
- Encryption Displays which encryption type that the driver is using. When you select Open System, Shared-Key System as Network Authentication, there are two options: WEP and Disabled. If you select WPA-PSK as Network Authentication, there are TKIP and AES options instead of WEP and Disabled.
- ▶ **Wep Key** Key #1, Key #2, Key #3, Key #4, the Key groups. You can enter 10 hexadecimal digits (any combination of 0-9, a-f, A-F) or 5 ASCII characters for 64-bit (also called 40bits) encryption. You can enter 26 hexadecimal digits (any combination of 0-9, a-f, A-F) or 13 ASCII characters for 128-bit (also called 104bits) encryption.

3.1.3 Link Status

The Link Status tab displays the adapter's current status.

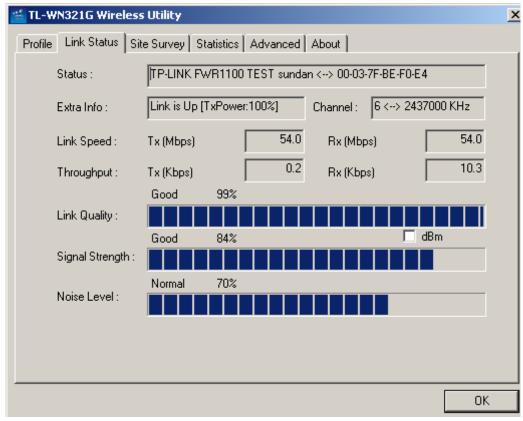


Figure 3-4 Link Status

The following table describes the items found on the Network Status screen.

- Status Shows whether the station is connected to the wireless network, if not connected, display RF is closed; if connected, display AP name and BSSID.
- **Extra Info -** Shows link status and the current channel in use.
- **Link Speed -** Shows the current max Transfer rate, unit is Mbit/sec. \triangleright
- **Throughput -** Displays Tx and Rx rate, unit is Kbits/sec.
- Link Quality Shows the quality of the signal.
- Signal Strength Shows the strength of the signal.

3.1.4 Site Survey

Click the Site Survey tab of the Utility and the Site Survey screen will appear, Figure 3-5. On the Site Survey screen you can scan the Available Infrastructure and Ad Hoc Networks.

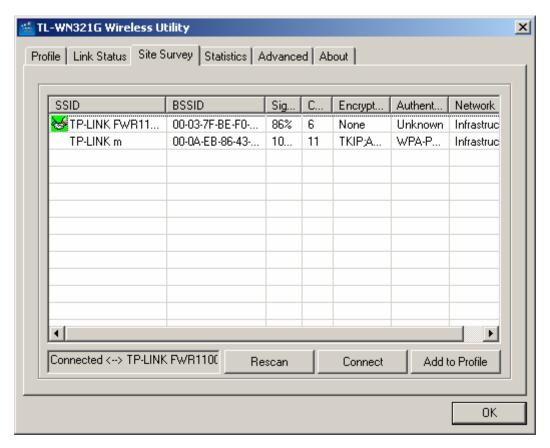


Figure 3-5 Site Survey tab

Click the Rescan button to refresh the list at any time. Highlight an SSID and click the Connect button to connect to an available network.

3.1.5 Statistics

The Statistics tab shows receiving and transmitting statistical information for the following receive and transmit diagnostics for frames received by or transmitted to the wireless network adapter. Click the **Reset Counter** button to reset the count of the statistics information.

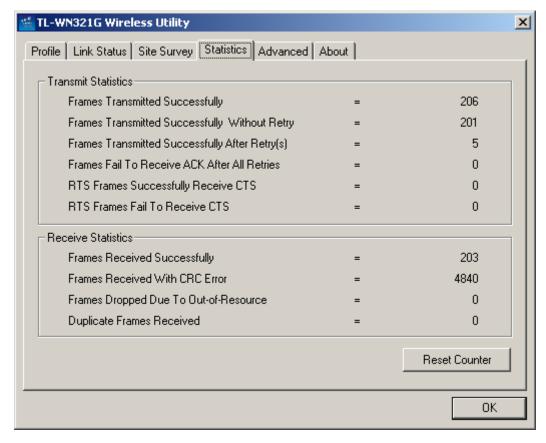


Figure 3-6 Statistics tab

3.1.6 Advanced

On this Screen, you can configure the WEP key or view the configured WEP key.

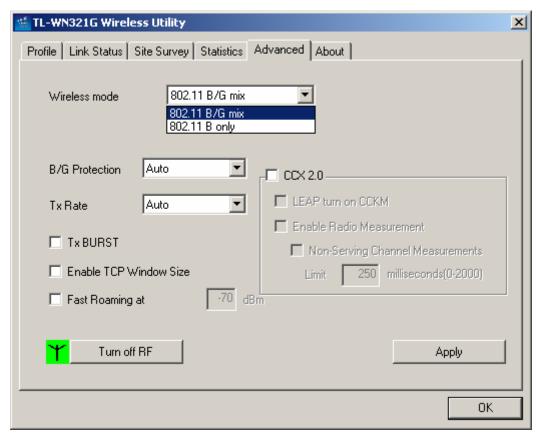


Figure 3-7 Advanced

- Wireless mode Displays the wireless mode, either 802.11B/G mix or 802.11B only.
- **B/G Protection -** There are three options: either Auto or Enable, or Close.
- > TxRate Shows the current Transfer rate.
- > TxBURST It can translate more data when it enable.
- > Fast Roaming at Roaming will disable when Transmit Power is below some dBm.
- > Turn off RF The wireless radio of this adapter can be enabled or disabled. You can turn the wireless radio off by selecting the check-box.
- > Apply Click the Apply button to save the current setting.

3.1.7 About

This screen displays some information about this adapter, including Driver Date, Driver Version, Utility Date, Utility Version, MAC Address, IP Address, SubMask, Power Save mode and Preamble.

- > Utility Version The version of this utility.
- Utility Date The creation date of this utility.
- > **Driver Version -** The version of the wireless network adapter driver.
- **Driver Date -** The creation date of the wireless network adapter driver.
- **EEPROM Version -** The version of this EEPROM.
- > IP Address The IP address of the wireless network.
- Phy_Address The MAC address of the wireless network adapter.

- 1 E-WINGZ
- > **Default Gateway -** The default gateway of the wireless network.

SubMask - The subnet mask of the wireless network.

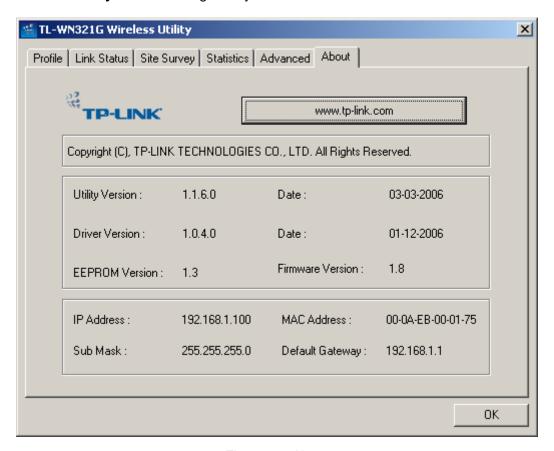


Figure 3-8 About

3.1.8 An example for application

Suppose you have an installed and using AP, the SSID is TPLINK and it adopts 64-bit encryption with the key 0123456789. To establish a connection with this AP, you should follow these steps below:

- 1. Launch TL-WN321G WIRELESS UTILITY Utility.
- 2. Click the **Profile** tab of the utility and click the **New** button on the screen that appears.
- The Profile configuration screen will appear, please enter Test for the Profile Name, TPLINK
 for the SSID, select Infrastructure for the Network Mode, select WEP for the Data Encryption
 and enter 0123456789 for Network key.
- 4. Click **OK** to save this profile.
- 5. Click **Apply** on the Profile screen. The utility will establish a connection with this AP by configured profile.

3.2 Configuration for windows Vista

After the Adapter's driver has been installed, Windows Vista will display a wireless Network Connection message like this one.

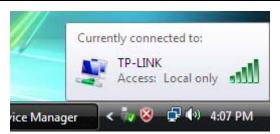


Figure 3-9

Icon means the connection has been established. Icon means there is no connection. If the icon does not appear, please follow the steps below. If the icon still does not appear, the driver may be installed incorrectly or the adapter is unplugged, please try again.

1. Right-click the icon in your system tray, then click **Connect to a network**.

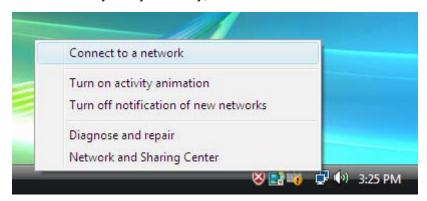


Figure 3-10

2. The screen that appears will show you many available wireless networks. Highlight the network that you want, and then click **Connect**.

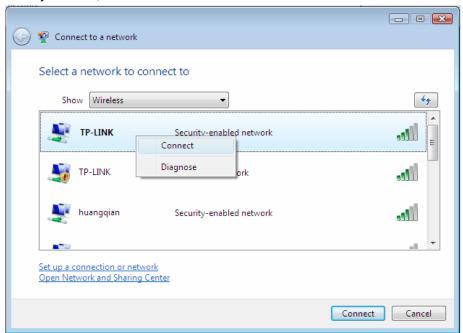


Figure 3-11

3. To continue, click Connect Anyway. Click the Cancel button to end the Installation.

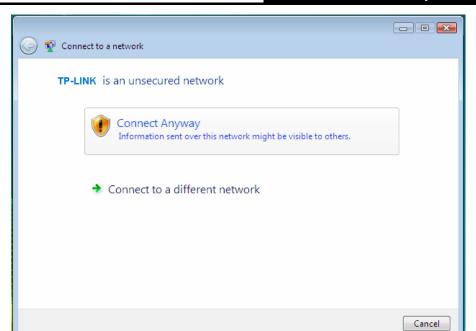


Figure 3-12

4. After that, the installation will proceed as shown in Figure 3-13, click **close**.

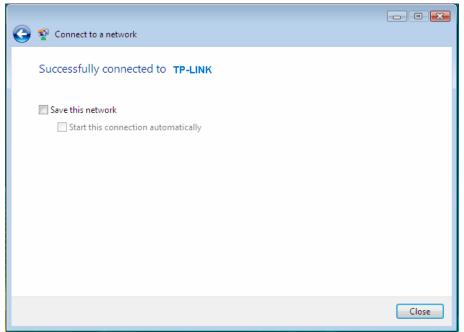


Figure 3-13

5. The screen below will appear if the connection is successfull.



Figure 3-14

Appendix A: Glossary

802.11b - The 802.11b standard specifies a wireless networking at 11 Mbps using direct-sequence spread-spectrum (DSSS) technology and operating in the unlicensed radio spectrum at 2.4GHz, and WEP encryption for security. 802.11b networks are also referred to as Wi-Fi networks.

802.11g - specification for wireless networking at 54 Mbps using direct-sequence spread-spectrum (DSSS) technology, using OFDM modulation and operating in the unlicensed radio spectrum at 2.4GHz, and backward compatibility with IEEE 802.11b devices, and WEP encryption for security.

Ad-hoc Network - An ad-hoc network is a group of computers, each with a wireless adapter, connected as an independent 802.11 wireless LAN. Ad-hoc wireless computers operate on a peer-to-peer basis, communicating directly with each other without the use of an access point. Ad-hoc mode is also referred to as an Independent Basic Service Set (IBSS) or as peer-to-peer mode, and is useful at a departmental scale or SOHO operation.

DSSS (Direct-Sequence Spread Spectrum) - DSSS generates a redundant bit pattern for all data transmitted. This bit pattern is called a chip (or chipping code). Even if one or more bits in the chip are damaged during transmission, statistical techniques embedded in the receiver can recover the original data without the need for retransmission. To an unintended receiver, DSSS appears as low power wideband noise and is rejected (ignored) by most narrowband receivers. However, to an intended receiver (i.e. another wireless LAN endpoint), the DSSS signal is recognized as the only valid signal, and interference is inherently rejected (ignored).

FHSS (Frequency Hopping Spread Spectrum) - FHSS continuously changes (hops) the carrier frequency of a conventional carrier several times per second according to a pseudo-random set of channels. Because a fixed frequency is not used, and only the transmitter and receiver know the hop patterns, interception of FHSS is extremely difficult.

Infrastructure Network - An infrastructure network is a group of computers or other devices, each with a wireless adapter, connected as an 802.11 wireless LAN. In infrastructure mode, the wireless devices communicate with each other and to a wired network by first going through an access point. An infrastructure wireless network connected to a wired network is referred to as a Basic Service Set (BSS). A set of two or more BSS in a single network is referred to as an Extended Service Set (ESS). Infrastructure mode is useful at a corporation scale, or when it is necessary to connect the wired and wireless networks.

Spread Spectrum - Spread Spectrum technology is a wideband radio frequency technique developed by the military for use in reliable, secure, mission-critical communications systems. It is designed to trade off bandwidth efficiency for reliability, integrity, and security. In other words, more bandwidth is consumed than in the case of narrowband transmission, but the trade off produces a signal that is, in effect, louder and thus easier to detect, provided that the receiver knows the parameters of the spread-spectrum signal being broadcast. If a receiver is not tuned to the right frequency, a spread-spectrum signal looks like background noise. There are two main alternatives, Direct Sequence Spread Spectrum (DSSS) and Frequency Hopping Spread Spectrum (FHSS).

SSID - A Service Set Identification is a thirty-two character (maximum) alphanumeric key identifying a wireless local area network. For the wireless devices in a network to communicate with each other, all devices must be configured with the same SSID. This is typically the configuration parameter for a wireless PC card. It corresponds to the ESSID in the wireless Access Point and to the wireless network name.

WEP (Wired Equivalent Privacy) - A data privacy mechanism based on a 64-bit or 128-bit or 152-bit shared key algorithm, as described in the IEEE 802.11 standard.

Wi-Fi - A trade name for the 802.11b wireless networking standard, given by the Wireless Ethernet Compatibility Alliance (WECA, see http://www.wi-fi.net), an industry standards group promoting interoperability among 802.11b devices.

WLAN (Wireless Local Area Network) - A group of computers and associated devices communicate with each other wirelessly, which network serving users are limited in a local area.

WPA (Wi-Fi Protected Access) - A wireless security protocol use TKIP (Temporal Key Integrity Protocol) encryption, which can be used in conjunction with a RADIUS server.

Appendix B: Specifications

General			
Interface	A-type USB 2.0 Connector		
Standards	IEEE 802.1b; IEEE 802.1g		
Operating System	Windows 98SE, ME, 2000, XP, Vista		
Transmission Distance	In door up to 100m, out door up to 300m (It is limited to the environment).		
Safety & Emission	FCC, CE		
Frequency	2.4 ~ 2.4835 GHz		
Sensitivity	54M -70dBm		
	11M -83dBm		
Spread Spectrum	Direct Sequence Spread Spectrum (DSSS)		
Wireless			
Radio Data Rate	54/48/36/24/18/12/9/6 Mbps 11g OFDM,11/5.5/2/1 Mbps 11b		
	DSSS,(Auto Rate Sensing)		
Modulation	11g OFDM , 11b CCK/DSSS		
Media Access Protocol	CSMA/CA with ACK		
Transmit Power	Typical 15dBm, 18dBm(Max)		
Data Security	WPA, 64/128 bit WEP, TKIP/AES, IEEE 802.1X authentication		

Physical Environmental			
Working Temperature	0℃~40℃ (32°F~104°F)		
Storage Temperature	-40℃~70℃ (-40°F~158°F)		
Humidity	10%∼90% RH, Non-condensing		